

MCS BV470FS Indirect Oil Heater

Highly Efficient Devices, Large Volumes of Instant Heat

The unit is heating air that flows through it by combustion chamber and heat exchanger. Supply fuel is burnt in combustion chamber. Fuel gas goes through heat exchanger outside to the chimney. Start of the device starts off the burner. After warming up the thermostat starts the fan. Cool air is sucked by fan. After heating air is exhausted outside through outlet panel (one, two or four way). The automatic and safe thermostat (with manual reset) are responsible for safe and correct work of device. In case of too high temperature increase, automatic thermostat cut of the fuel supply to the burner. After that unit is chilled to safe temperature and then starts again. In case of critical temperature the unit is stopped by safe thermostat. Restart is only possible after chilling the unit and after manual reset the safe thermostat. Additionally the fan motor is secure by thermic relay, which protect it against overload. BV/GREEN machines can be operated optional in heat mode and vent mode (without burner).




Specifications

	kW	134
Max Capacity	Kcal/h	115296
	Btu/h	457227
Fuel		Diesel/Kerosene
Net Weight	lb	500
Gross Weight	lb	562
Noise Level	dBa	77
Airflow	cfm	4710
Fuel Consumption	gph	3,5
Air Outlet	in	4 x 10
Fan		axial
Power Supply	V	120/240
Frequency	Hz	60
Rated Current	A	9,5

Packaging

Packaging Dimensions	in	82 x 30 x 48
Dimensions Utilization	in	88 x 35 x 49
Pieces for Europallet	n°	1
Pieces per Truck	n°	44
		80m ³

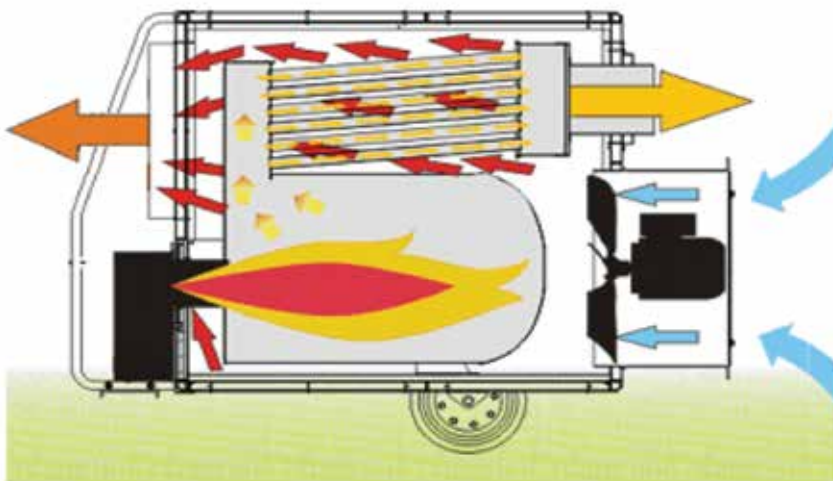


Components

Burner	Riello 40 F20
Nozzle	3.5 GPH 60° DELAVAN type W
Igniter	Electrodes
Fuel Filter	100 µm, pre-heater 100W
Motor	asynchronous, three-phase, 1750 g/1'
Fan	Ø19,6 in / 27° 6-blades
Room Thermostat	Predisposed for connection of room thermostat

Accessories

Room Thermostat	Thermostat TH5
Tank	37 gal
Air Distribution Hoses	flexible hoses 25 ft
Turning Wheel	metal-rubber wheel with brake, diameter 5 in
Twin Bends	inlet Ø23,6 in, outlet 2x Ø15,7 in
One Way Air-outlet Panel	Ø23,6 in
Other	fuel scoop, transport guides

Wiring

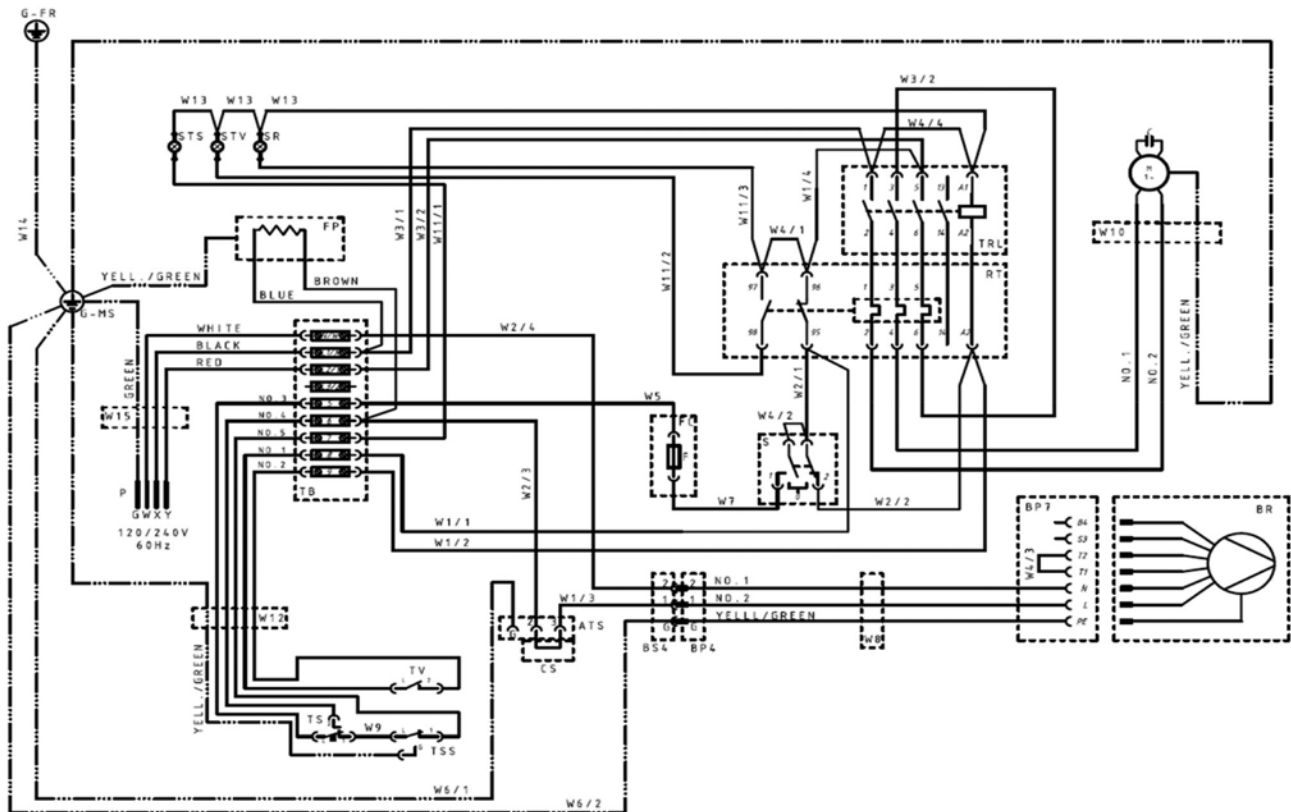

evolve
emergency
 PREPAREDNESS

7 Industrial Way, Salem, NH 03079-2817
 Tel: 1-888-315-9007
www.evolvecorp.com